

Top to Bottom - Rod Display System

**WARNING**


• This system must be installed according to manufacturer's instructions and be done so by qualified installer.  
 • All installation must be done so with proper hardwares and protective gears to ensure safety.  
 • Total weight of system is not to exceed manufacturer's recommended safe weight load.

\* Some components are pre-assembled and will require minimal dismantling prior to installation.  
 \*\* Use a plumb line to reference install locations before drilling.

- 1) Mount part (A). #8 screw or M6 stud.
- 2) Attach part (B) onto (A).
- 3) Mount part (C). #8 screw or M6 stud.
- 4) Attach rod ARBA-R6-M10, part (D) into part (B).  
 If the installation requires multiple rods for each top to bottom setup, attach the extension rods as well.  
 \*ARBA-R6-M6 or ARBA-R-M6 (E) into part (D)
- \*\*Rods may be cut to length. Leave at least 1" of space between the rod and the floor.
- 5) Insert parts (F) and part (G) before securing rod in place. Lightly tighten the parts to hold in place.
- 7) Secure part (G) to part (C). Tighten the M4 screw on part (G) to secure the rod in place.
- 8) Adjust parts (F) to the desired height and tighten.

*Make final adjustments to the clamp location before tighten. The panels can now be put into place.*

*It is important to check that parts are properly tightened prior to usage.*

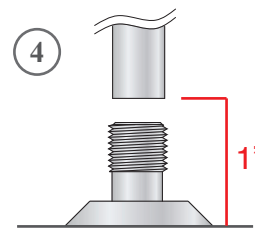

• Parts (F) can be any of the available clamps.